



350-079 / 350-079WT



Wooden Play Kitchen for Children



PART LIST

 1: 1PC		 2: 1PC		 3: 1PC		 4: 1PC		 5: 1PC	
 6: 1PC		 7: 1PC		 8: 1PC		 9: 1PC		 10: 1PC	
 11: 1PC		 12: 1PC		 13: 1PC		 14: 1PC		 15: 1PC	
 16: 1PC		 17: 1PC		 18: 1PC		 19: 1PC		 20: 1PC	
 21: 1PC		 22: 1PC		 23: 1PC		 24: 1PC		 25: 1PC	
 26: 1PC		 27: 1PC		 28: 1PC		 29: 1PC		 30: 1PC	
 31: 1PC		 32: 1PC		 33: 1PC		 34: 1PC		 35: 1PC	
 36: 1PC		 37: 1PC		 38: 1PC		 39: 1PC		 40: 1PC	
 41: 1PC		 42: 1PC		 43: 1PC		 A: 49PCS		 B: 17PCS	
 C: 8PCS		 D: 4PCS		 E: 56PCS		 F: 33PCS		 G: 5PCS	
 H: 1PC		 I: 8PCS		 J: 4PCS		 K: 3PCS		 L: 3PCS	
 M: 3PCS		 N: 1PC		 O: 2PCS		 P: 1PC		 Q: 1PC	
 R: 5PCS		 S: 4PCS		 T: 4PCS		 U: 1PC		 V: 4PCS	







